
## Model SAM 950 Ruggedized Isotope Identifier







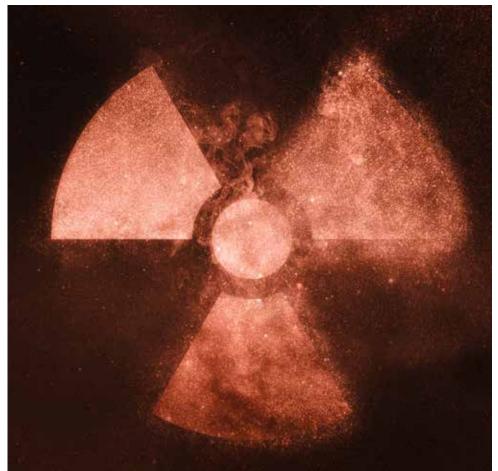

#### **Features**

- · Rich PDA-Based Feature Set
- Immediate Reach-Back Emailing
- Behind the Scene Auto-Calibration
- Water and Shock Proof
- High Resolution Gamma and Neutron
- Multimedia Training and Support

## **Applications**

- · Secondary Radiation Screening
- Medical / Industrial Nuclear Controls
- Event Management
- Health Physics / Hazmat Support
- Port and Border Law Enforcement



Model SAM 950 Ruggedized Isotope Identifier



## Model SAM 950 Ruggedized Isotope Identifier

#### **Description**

The SAM 950 Ruggedized Isotope Identifier is the only RIID available with an internal, hardened 3"x3" Nal detector option. The higher sensitivity associated with the large volume Nal detector ensures rapid screening of low activity threats, detection of masked or shielded isotopes, and quick spectroscopic analysis. The SAM 950 also offers users a smaller light-weight optional Nal detector as well as an optional solid-state neutron detector.

Users will love the interface, following touch movements common to smart phones. You can expand on peaks in a spectrum to take a closer look at the energy peaks, or swipe sideways to additional alarm and event details. Once a report is generated, quickly append the report with photos, voice memos and video.





\*Touch Screen or Bubble Key Pad

Reach-Back is greatly simplified with the latest release of PeakAbout, the BNC app that runs the suite of new SAM III products. With a single button, you can send to a predefined list of email addresses, a copy of the incident report, a known isotope measurement and a background report. Situational details such as photos and video can be included in the auto-reporting function, or set for on-request only.

#### Rad-Responder, STC and FBI Integration

With simple menu settings, management can determine the appropriate protocols to be enacted and the destination locations for the data to be sent. End users can use commercial satellites or government supplied hotspots to transmit data. Encryption is available as well.

For user groups with larger programs, PeakGo offers integration into user defined command center applications. The data, complete with spectroscopic analysis and first responder commentary, travels seamlessly using WiFi or 4G to the user receiving destination.





## Model SAM 950 Ruggedized Isotope Identifier

#### **Product Enhancements**

The SAM 950 has been enhanced with some useful application specific tools:

- ✓ See the new LED Flashlight for nighttime operations or analysis indoors in poorly lit areas (warehouse, duct systems, storage containers, etc).
- ▼ The shoulder mount clips have been repositioned to balance the weight equally for the end user when operating for long periods.
- ◀ A convenient Tri-Pod mount is included on the underside of the instrument, enabling fixed geometry spectroscopy or monitoring packages and personnel.





Log In with RadResponder Credentials

# **SAM 950 Ordering Information**

Model 950-XX-YYY	(XX = Type, YYY=Gamma Detector)
G-	Nal Gamma
GN-	Nal Gamma with Neutron
-N15	1.5"x1.5"Nal Detector
-N20	2.0"x2.0" Nal Detector
-N30	3.0"x3.0" Nal Detector
HG-	High Resolution Gamma
HGN-	High Resolution Gamma with Neutron
-C15	1.5"x1.5" CeBr3 Detector
-C20	2.0"x2.0" CeBr3 Detector
-L15	1.5"x1.5" LaBr3 Detector

# **SAM 950 Specifications**

Application	Secondary Screening, Isotope Confirmation, Spectral Analysis, Dose
Application	Rate Meter, Data Logging, Source Locater
Modes	Finder (source hunt), Identification, Analysis, Reporting
Interface	Keypad and Touchscreen, One Hand / Gloved Operation
Energy Range (Gamma)	20 keV – 3.0 MeV
Energy Resolution	Nal Detectors <7% @ 662 keV
	LaBr3 Detectors <3% @ 662 keV
	CeBr3 Detectors <4% @ 662 keV
MCA Electronics	10-bit, 1024 channels, proprietary electronics design
Dose Rate Range	0-10 mR/hr (NaI), 10 mR/hr – 10 R/hr (GM Tube)
Stabilization	Automatic Real Time Stabilization, No External Source Required
Isotope Identification	Typical 2-10 seconds, ANSI compliant Library, Isotope/Category/Confidence Level
Battery	>8 Hours continuous use, Lithium Ion w/Low Battery Indicator Standard AA Alkaline Battery Adapter (optional)
Alarms	Audible (Waterproof Speaker on Rear)
	Visual (On Screen Indicator)
Alarm Types	Gamma Dose Rate, Gamma Count, Neutron Count, CPS
	Secondary Health Alarm – Danger Indication
Detector Types	NaI(TI): 1.5"x1.5", 2.0"x2.0", 3.0"x3.0"
	LaBr3 / CeBr3: 1.5"x1.5", 2.0"x2.0"
	GM Tube: Gain Compensated Geiger-Muller Detector Solid State Neutron: 4 cm² active area, 20% thermal N eff., γ rej. 1:107
Library	ANSI, ANSI+ 2015, Medical, Industrial, User Defined
Reach-Back Tool	ANSI N42.42-2012 or CSV Event Data via Email Distribution List or
Neach-Dack 1001	WiFI (Rad Responder)
Application	Android Based Application (PeakAbout) for Smartphones, Tablets.
	Windows Based application for Command Center integration.
Dimensions (WxDxH)	192 mm x 356 mm x 214 mm
Weight	Standard (NaI, CeBr /LaBr): 6.3 lbs (2.9 kg) High Sensitivity (NaI Only): 9.5 lbs (4.3 kg)
Operating Temp.	-4°F to 122°F
Rel. Humidity	10% to 90%, non-condensing
Water / Dust Protection	IP65 Rated, Sprayable for Decontamination
Connectivity	MicroUSB 2.0, WiFi, Bluetooth 4.1 (ANSI N42.42-2012)
PDA Features	Camera : CMOS, 13.0 MP
	Display : 5" Touch Screen / AMOLED GPS : Built-In with LAT/LONG logging
Speaker	84 dB (1 W / 0.5 m), Waterproof
Package Contents	Power Charger (12 V, 3 A), Vehicle Charging Adapter, Shoulder Strap, Pelican Hard Case, Calibration Certificate (NIST Traceable)